



Graver Technologies

FILTRATION | SEPARATION | PURIFICATION



PMA™ Series Filter Cartridges

“Absolute” Rated Pleated Filter Cartridges

Product Specifications

Media: Polypropylene

Gaskets/O-Rings:

Buna-N, EPDM, Silicone, Teflon

Encapsulated Viton (O-Rings only), Viton

Polypropylene micron ratings:

0.2, 0.45, 1, 2.5, 5, 10, 25, 50, 100 µm

Dimensions

Nominal lengths:

5" 9.75" 10" 20" 30" 40"

12.7 24.8 25.4 50.8 76.2 101.6 cm

Outside diameter: 2.7" (6.86 cm)

Inside diameter: 1.0" (2.54 cm)

Operating Parameters

Maximum operating temperature:

176°F (80°C)

Maximum differential pressure:

75 psid @ 70°F (5.2 bar @ 21°C)


30 psid @ 176°F (2.0 bar @ 80°C)

Maximum reverse pressure:

40 psid @ 70°F (2.8 bar @ 21°C)

Recommended change-out pressure:

35 psid (2.4 bar)

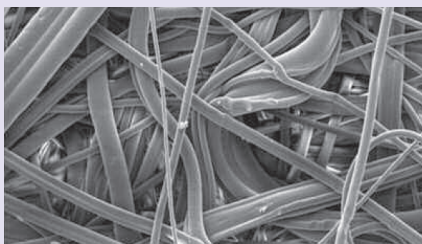

This all polypropylene filter retains particles with absolute efficiency. Available in a broad range of pore sizes, it is suitable for a wide range of applications. The pleated construction provides a high surface area to offer outstanding overall filtration economy.

FEATURES & BENEFITS

- Micron ratings from 0.2 to 100 µm — Broad application range
- “Absolute” efficiency — Rated at 99.98% (Beta 5000)
- Competitive surface area — High flow rates, and long online service — minimize maintenance cost
- Fixed pore structure — Eliminates dirt unloading at maximum differential pressure
- Polypropylene construction — Inert to many process fluids
- Various gasket/O-ring materials — Compatible with a variety of fluids
- Manufactured in continuous lengths up to 40 inches

CERTIFICATIONS

- USP Class VI: Meets USP Class VI Biological Test for Plastics
- FDA Listed Materials: All materials comply with FDA Title 21 of the Code of Federal Regulations Sections 174.5, and 177.1520, as applicable for food and beverage contact.
- European Directive for Direct Food Contact: European Regulation No. 1935/2004 and European Regulation 10/2011: Tested for migration behavior and is suitable for contact with all kinds of foodstuffs with minimal rinse-up. Data available upon request.


PMA NOMENCLATURE INFORMATION

| Filter Type | Retention Rating (microns) | | Nominal Length (inches) | | End Configuration | | Gasket or O-Ring | | Options | |
|--------------------------------|----------------------------|-----|-------------------------|-----|-------------------|----------------------------------|------------------|------------------------------------|---------|-------------------|
| | | | | | | | | | | |
| PMA Series | 0.2 | 10 | -5 | -20 | P | Double Open End | B | Buna-N | -I | End Cap Insert |
| | 0.45 | 25 | -9.75* | -30 | P2 | 226/Flat Single Open End | E | EPDM | | |
| | 1 | 50 | -10 | -40 | P3 | 222/Flat Single Open End | S | Silicone | -R | Factory Pre-Rinse |
| | 2.5 | 100 | | | P7 | 226/Fin Single Open End | T | Teflon encap. Viton (O-Rings only) | | |
| | 5 | | | | P8 | 222/Fin Single Open End | T | Teflon Gasket | | |
| | | | | | AM | Single Open End, Internal O-Ring | V | Viton | | |
| | | | | | NPC | Double Open End, Internal O-Ring | | | | |
| Example: PMA 2.5-10PV-R | | | | | | | | | | |
| PMA | 2.5 | | -10 | | P | | V | | -R | |

*Available only for DOE (P) configuration

PMA FLOW RATE

Typical Flow Rate Clean Water at Ambient Temperature (per 10" cartridge)

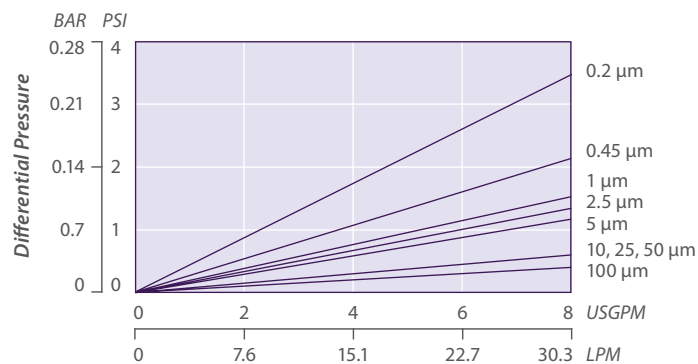

For liquids other than water, multiply pressure drop by the fluid viscosity in centipoise

The micron ratings shown at various efficiency and beta ratio value levels were determined through laboratory testing, and can be used as a guide for selecting cartridges and estimating their performance. Under actual field conditions, results may vary somewhat from the values shown due to the variability of filtration parameters.

Testing was conducted using the single-pass test method, water at 3 gpm/10" cartridge. Contaminants included latex beads, coarse and fine test dust. Removal efficiencies were determined using dual laser source particle counters.

REMOVAL EFFICIENCY

| Beta Ratio Efficiency | Beta 5000 99.98% | Beta 100 99% | Beta 50 98% |
|-----------------------|---------------------|-----------------|----------------|
| 0.2 μm | 0.20 | 0.10 | 0.05 |
| 0.45 μm | 0.45 | 0.30 | 0.20 |
| 1 μm | 1.0 | 0.60 | 0.30 |
| 2.5 μm | 2.5 | 2.0 | 1.5 |
| 5 μm | 5.0 | 4.0 | 3.0 |
| 10 μm | 10.0 | 8.0 | 7.0 |
| 25 μm | 25.0 | 19.0 | 15.0 |
| 50 μm | 45.0 | 35.0 | 28.0 |
| 100 μm | - | 100.0 | 85.0 |

$$\text{Beta Ratio} = \frac{\text{Upstream particle counts}}{\text{Downstream particle counts}}$$

FOR MORE INFORMATION

Customer Service/Technical Support: 1-888-353-0303
 Europe (UK): +44-1424-777791 | China: +86-21-5238-6576
 Asia: +65-9635-7690

GTX-261 10-16



DISTRIBUTED BY

All information and recommendations appearing in this bulletin concerning the use of products described herein are based on tests believe to be reliable. However, It is the user's responsibility to determine the suitability for his own use of such products. Since the actual use by others is beyond our control, no guarantee, expressed or implied, is made by Graver Technologies as to the effects of such use or the results to be obtained. Graver Technologies assumes no liability arising out of the use by others of such products. Nor is the information herein to be construed as absolutely complete, since additional information may be necessary or desirable when particular or exceptional conditions or circumstances exist or because of applicable laws or government regulations. PMA is a trademark of Graver Technologies, LLC.



Graver Technologies | 200 Lake Drive, Glasgow, DE 19702 | 302-731-1700 | 800-249-1990
 Fax: 1-302-369-0938 | info@gravertech.com | www.gravertech.com

A member of The Marmon Group—A Berkshire Hathaway Company